

**SET** Press [SET] for 1 second

**P** Programming Code (4~8 digits)

**P** User Code (4~8 digits)



User Card

**OK**

Complete **[ Alkaline batteries only ]**

- Change Programming Code **SET** → **P** → # → ① → ① → # → <sup>new</sup>**P** → # → <sup>new</sup>**P** → # → **OK**
- Add User Code(s) **SET** → **P** → # → ② → ① → # → **P** → # → **P** → # → **OK**
- Add User Card **SET** → **P** → # → ② → ③ → # → → → **OK**
- Delete User Code(s) **SET** → **P** → # → ③ → ① → # → **P** → # → **P** → # → **OK**
- Delete User Card(s) **SET** → **P** → # → ③ → ③ → # → → → **OK**
- Guiding Code **SET** → **P** → # → ② → ② → # → 

①	→ #	Turn Off	→ <b>OK</b>
①	→ #	Turn On	
- 
- Vacation mode **SET** → **P** → # → ⑤ → ① → # → 

①	→ #	Turn Off	→ <b>OK</b>
①	→ #	Turn On	
- Volume **SET** → **P** → # → ⑥ → ① → # → 

①	→ #	Turn Off	→ <b>OK</b>
①	→ #	Turn On	
- Auto-lock delay timer **SET** → **P** → # → ⑦ → ① → # → Enter new time (5 - 99) → # → **OK**
- Double authorization mode **SET** → **P** → # → ⑨ → ⑨ → # → 

①	→ #	Turn Off	→ <b>OK</b>
①	→ #	Turn On	
- Passage mode / Auto-lock **SET** → 

Ⓢ	→ Passage mode	→ <b>OK</b>
#	→ Auto lock	

Press and hold # right after the door is unlocked to stop auto-locking.

To enable auto-lock, activate the screen then press and hold # again until beep sound.

**Factory reset : While inserting the last battery, press and hold SET button until long beep is over.**

For further settings, see the instruction manual.